


## Piezotech Processing's guides

### - How to formulate -

Piezotech FC and Piezotech RT polymers are soluble in different solvents given below. The concentration of the polymer in the solvent has to be adjusted in order to get the appropriate viscosity corresponding to the printing process used. The actual ink formulation can be obtained by progressively adding the polymer into the solvent under heating. In order to get homogeneous films with high electrical breakdown a filtering step of the solution is required (ideally 1µm or less). This will remove impurities and prevent the formation of gel particles. Standard commercial filtering processes using filtering cartridges or filtering syringes are commonly used.

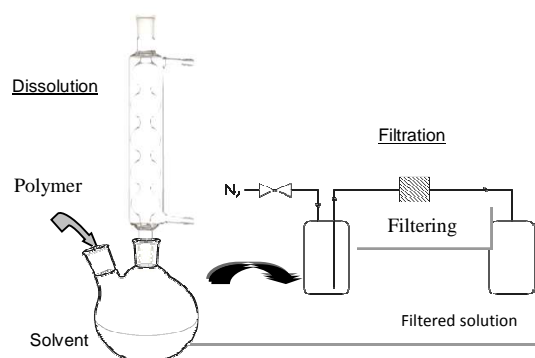

*Ink formulation processing*

**Indicative list of solvents that can be used to dissolve & formulate Piezotech FC™ and Piezotech RT™ polymers**

Solvent	Boiling Point (°C)	Flash Point (°C)
Tetrahydrofuran	65	-17
Methyl ETHyl Ketone	80	-6
Dimethyl formamide	153	67
Dimethyl acetamide	166	70
Tetramethyl urea	177	65
Dimethyl Sulfoxide	189	35
Trimethyl phosphate	195	107
N-Methyl-2-Pyrrolidone	202	95
Acetone	56	-18
Methyl Isobutyl Ketone	118	23
Glycol Ethers	118	40
Glycol Ether Esters	120	30
N-Butyl Acetate	135	24
Cyclohexanone	157	54
Diaceton Alcoo	167	61
Diisobutyl Ketone	169	49
Ethyl Aceto Acetate	180	84
Butyrolactone	204	98
Isophorone	215	96
Triethyl phosphate	215	116
Carbitol Acetate	217	110
Propylene Carbonate	242	132
Glyceryl triacetate	258	146
Dimethyl Phtalate	258	149

---

## Safety and Storage

Please refer to the safety datasheet

### Contact Information

Piezotech  
Arkema-CRRA  
Rue Henri Moissan  
69496 Pierre-Benite Cedex

[Info.piezotech@arkema.com](mailto:Info.piezotech@arkema.com)

Tel : +33 4 72 39 97 03

[www.piezotech.eu](http://www.piezotech.eu)

---

## Disclaimer

The statements, technical information and recommendations contained herein are believed to be accurate as of the date hereof. Since the conditions and methods of use of the product and of the information referred to herein are beyond our control, ARKEMA expressly disclaims any and all liability as to any results obtained or arising from any use of the product or reliance on such information; NO WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE, WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, IS MADE CONCERNING THE GOODS DESCRIBED OR THE INFORMATION PROVIDED HEREIN. The information provided herein relates only to the specific product designated and may not be applicable when such product is used in combination with other materials or in any process. The user should thoroughly test any application before commercialization. Nothing contained herein constitutes a license to practice under any patent and it should not be construed as an inducement to infringe any patent and the user is advised to take appropriate steps to be sure that any proposed use of the product will not result in patent infringement. See SDS for Health & Safety Considerations.

Arkema has implemented a Medical Policy regarding the use of Arkema products in Medical Devices applications that are in contact with the body or circulating bodily fluids (<http://www.arkema.com/en/social-responsibility/responsible-product-management/medical-device-policy/index.html>) Arkema has designated Medical grades to be used for such Medical Device applications. Products that have not been designated as Medical grades are not authorized by Arkema for use in Medical Device applications that are in contact with the body or circulating bodily fluids. In addition, Arkema strictly prohibits the use of any Arkema products in Medical Device applications that are implanted in the body or in contact with bodily fluids or tissues for greater than 30 days. The Arkema trademarks and the Arkema name shall not be used in conjunction with customers' medical devices, including without limitation, permanent or temporary implantable devices, and customers shall not represent to anyone else, that Arkema allows, endorses or permits the use of Arkema products in such medical devices.

**It is the sole responsibility of the manufacturer of the medical device to determine the suitability (including biocompatibility) of all raw materials, products and components, including any medical grade Arkema products, in order to ensure that the final end-use product is safe for its end use; performs or functions as intended; and complies with all applicable legal and regulatory requirements (FDA or other national drug agencies) It is the sole responsibility of the manufacturer of the medical device to conduct all necessary tests and inspections and to evaluate the medical device under actual end-use requirements and to adequately advise and warn purchasers, users, and/or learned intermediaries (such as physicians) of pertinent risks and fulfill any postmarket surveillance obligations. Any decision regarding the appropriateness of a particular Arkema material in a particular medical device should be based on the judgment of the manufacturer, seller, the competent authority, and the treating physician. <sup>1</sup>**